

Arc4 Pocket Reference: Basic Operation

Normal operation: (click on, click off)			
Momentary use: (hold down)			
Full power: (hold down)			
Toggle brightness: (double-click)			
Lowest power: (triple-click)			

- The light will turn on in last selected brightness unless “Force Primary” is on.
- The primary and alternate brightness levels may be changed. (See reverse.)
- A double blink indicates the switch is locked, triple-click to release.
- If light will not latch on, one of the tactical modes is in effect. Double-click to latch on, or reset light.
- To reset, remove battery for 120 seconds.

Arc4 Pocket Reference: Menus & Settings

To enter the **Options Menu**:
Click 10+ times from OFF

To enter the **Brightness Setting Menu**:
Click 10+ times from OFF and hold last click

OPTION	INDICATED BY	
SOS:		• The current “turn-on” brightness will be changed. • Click to change brightness, double-click reverses.
Switch Lock:		
Force Primary:		Both Menus: • Press and hold until accept flash stops to accept current option/brightness. • If button released before flashing stops or no input within 10 seconds, the light will signal error and exit menu.
Locator Flash:		
Ready For Service:		
Semi-Tactical:		Error Flash: 
Pure-Tactical:		Accept Flash: 

CLICK advances to next item. DOUBLE-CLICK reverses.